


Current roller type structure

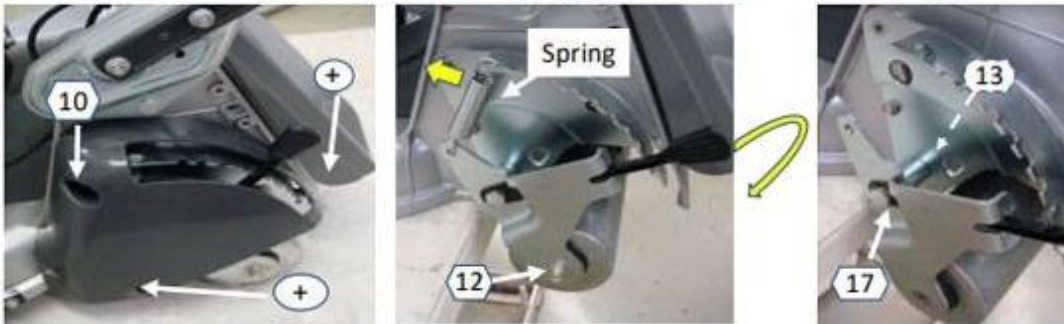

< Left side > (Number of drawing is tooling size and type)



< Right side >



Left & right : Dismount the cover.

Left : Change the roller to lowest position then dismount the spring.

Left & right : Dismount the adjuster and roller.

Improvement of maintainability

The rollers can be removed by removing **only 3 bolts**.(Left and Right side)



* It is unnecessary to dismount the cover and spring.